



# INSTALLATION INSTRUCTIONS

1999-11 1500-2500-3500 SILVERADO/SIERRA EXT CAB

PART NUMBER 224009/224009-2

## PARTS LIST:

1	Passenger Side Bar	2	Center Support Brackets 2011
1	Driver Side Bar	2	10mm x 47mm bolt tab
1	Passenger Side Front Mounting Bracket	18	10-1.50mm x 30mm Hex Head Bolts
1	Driver Side Front Mounting Bracket	6	10mm Hex Nuts
1	Passenger Side Center Mounting Bracket	20	10mm Lock Washers
1	Driver Side Center Mounting Bracket	24	10mm ID x 22mm OD x 1.5mm Flat Washers
1	Passenger Side Rear Mounting Bracket	2	10mm Nut Plates
1	Driver Side Rear Mounting Bracket	2	12-1.75mm x 30mm Hex Head Bolts
2	Front Support Bracket 99-10	2	12mm Hex Nuts
2	Center Support Brackets 99-10	4	12mm ID x 29mm x 3mm Flat Washers
2	Front Support Bracket 2011	2	12mm Lock Washers

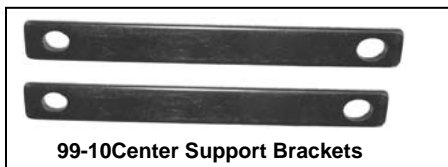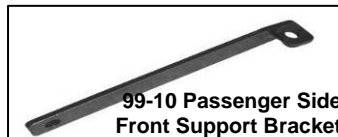

10mm Bolt tabs




2011 Passenger Side Front Support Bracket 2500/3500 Models

2011 Passenger Side Middle Support Bracket 2500/3500 Models

2011 Driver Side Middle Support Bracket 2500/3500 Models

2011 Driver Side Front Support Bracket 2500/3500 Models

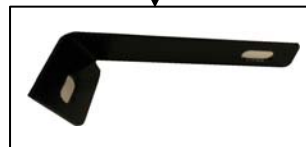

## PROCEDURE:

1. **REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
2. From underside of vehicle remove front, center, and rear body mount bolts. Do not remove bushings.
3. Hang driver side front, center and rear Mounting Brackets into position by partially threading factory body mounting bolts back into body mounts **(Fig 1)**.
4. Locate the two factory holes in the bottom of the frame towards the front of the vehicle. Insert (1) Nut Plate through oval hole and orient Nut Plate towards the front round hole, **(Fig 2)**.
5. Attach driver side front Support Bracket to already inserted Nut Plate by partially threading (1) 10mm x 30mm Hex Head Bolt, (1) 10mm Lock washer, and (1) 10mm Flat Washer **(Fig 3 & 4)**.

### **(1999-11) Front brace brackets 1500 Models:**

Attach opposite side of driver side front Support Bracket to outside hole in the Mounting Bracket using the included (1) 10mm x 30mm Hex Head Bolt, (1) 10mm Hex Nut, (1) 10mm Lock Washer, and (2) 10mm Flat Washers **(Fig 3)**. Do not tighten at this time.

### **(1999-10) Front brace brackets 2500 Models:**

Note that the Support Bracket will not reach the Mounting Bracket **(Fig 4)**. Tighten the Support Bracket to Nut Plate in the frame. Carefully push up on the Support Bracket until it reaches the inside hole in the Mounting Bracket **(Fig 5)**. Attach opposite side of driver side front Support Bracket to inside hole in the Mounting Bracket using the included (1) 10mm x 30mm Hex Head Bolt, (1) 10mm Hex Nut, (1) 10mm Lock Washer, and (2) 10mm Flat Washers **(Fig 6)**. Do not tighten at this time.

### **(2011) Front brace brackets 2500 Models:**

Attach driver side front Support Bracket to the already inserted Nut Plate by partially threading (1) 10mm x 30mm Hex Bolt, (1) 10mm Lock washer, and (1) 10mm Flat Washer as seen in **(Fig 7)**

Attach opposite side of driver side front Support Bracket to outside hole in the Mounting Bracket using the included (1) 10mm x 30mm Hex Head Bolt, (1) 10mm Hex Nut, (1) 10mm Lock Washer, and (2) 10mm Flat Washers **(Fig 7A)**. Do not tighten at this time.

### **(1999-11) 1500 and (1999-10) 2500 Models Middle brace brackets**



6. From the inner side of the center body mount, place (1) Center Support Bracket onto front side of the body mount. Attach Center Support Bracket to body mount using the included (1) 12-1.75mm x 30mm Hex Head Bolt, (1) 12mm Hex Nut, (1) 12mm Lock Washer, and (2) 12mm Flat Washers **(Fig 8 & 9)**. Do not tighten at this time. **NOTE:** Larger hole on the Center Support Bracket mounts to body mount.
7. Attach opposite side of Center Support Bracket to center Mounting Bracket using the included (1) 10-1.50mm x 30mm Hex Head Bolts, (1) 10mm Hex Nuts, (1) 10mm Lock Washers, and (2) 10mm Flat Washers **(Fig 8 & 9)**. Do not tighten at this time.
8. **(2011) 2500 Models: Middle brace brackets**  
Located just above the mount bracket there is a oblong hole as seen in **(Fig 10)** place the bolt tab in the hole, select the driver side brace bracket and secure it to the bolt tab with (1) 10mm Hex Nut, (1) 10mm Lock Washer, and (1) 10mm Flat Washers attach opposite side of driver side middle Support Bracket to inside hole in the Mounting Bracket using the included (1) 10mm x 30mm Hex Head Bolt, (1) 10mm Hex Nut, (1) 10mm Lock Washer, and (2) 10mm Flat Washers **(Fig 10A)**. Do not tighten at this time.
9. Carefully position Driver Side Bar onto Mounting Brackets. Attach Side Bar to Mounting Brackets using the included (6) 10-1.50mm x 30mm Hex Head Bolts, (6) 10mm Lock Washers, and (6) 10mm Flat Washers **(Fig 11)**. Do not tighten at this time.
10. Level and adjust Side Bar, then tighten all hardware at this time.
11. Repeat steps 2-9 for passenger Side Bar.
12. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

**For gloss black finishes:** Mild soap may be used to clean the Sidebar.


### Driver Side Installation Pictured

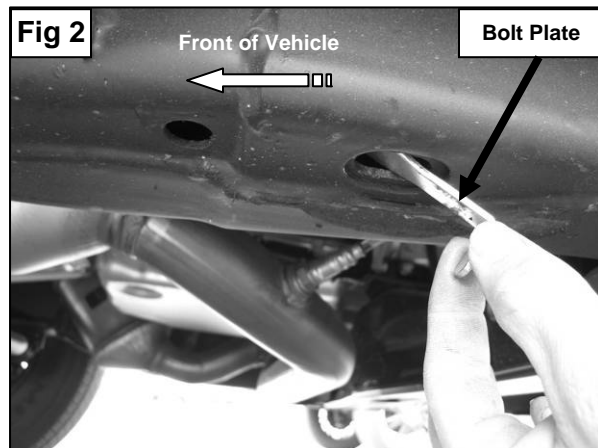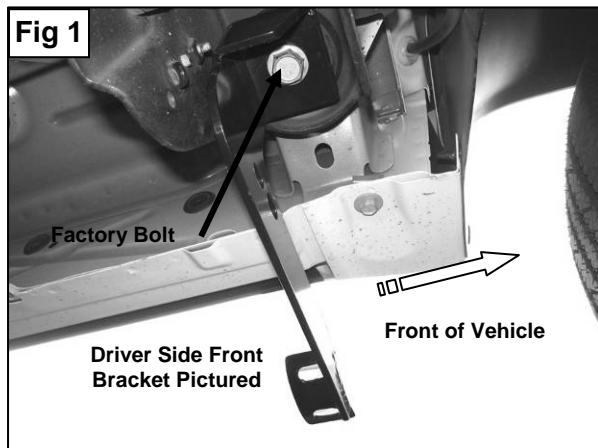


### 1999-11 1500 Model Front Installation Pictured

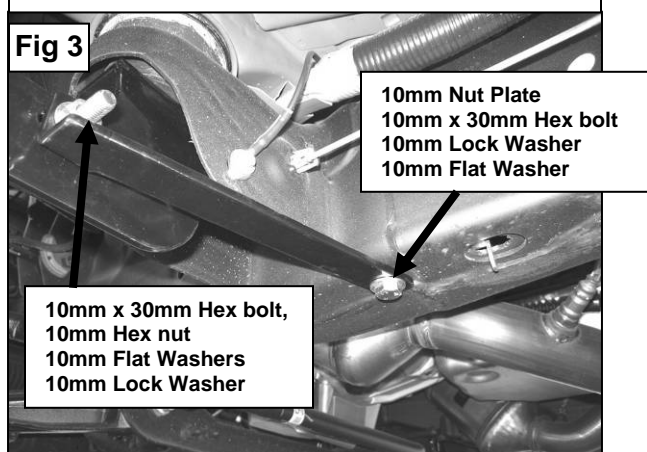


### 1999-10 2500 Model Front Installation Pictured

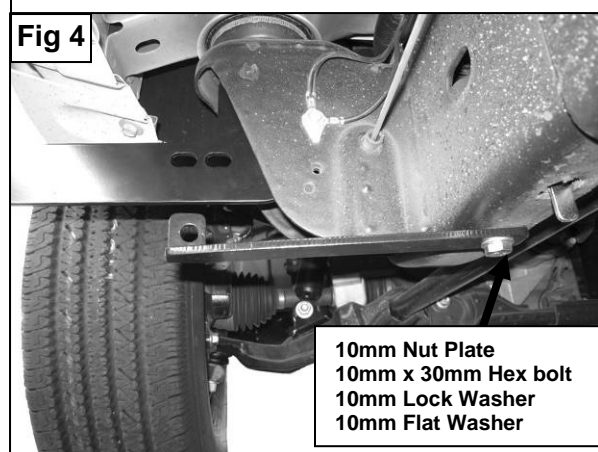

### 99-10 2500 Model Front Installation Pictured

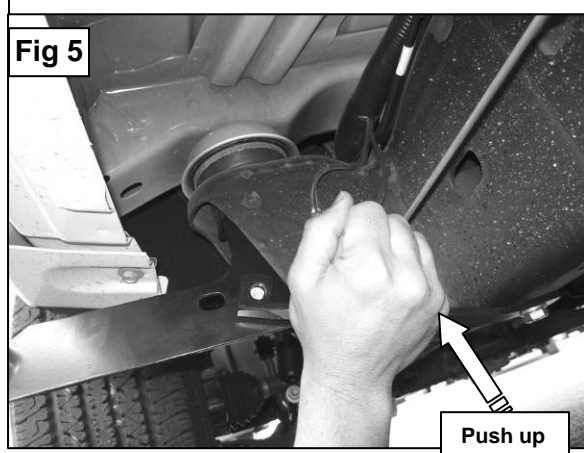


### 99-10 2500 Model Front Installation Pictured

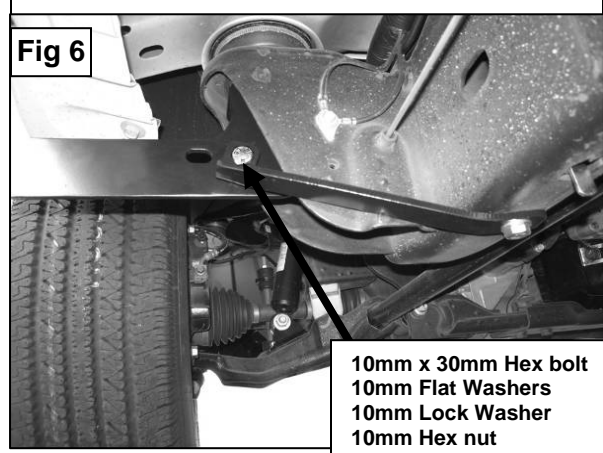


**2011 2500 Model Front Installation Pictured**

**Fig 7**

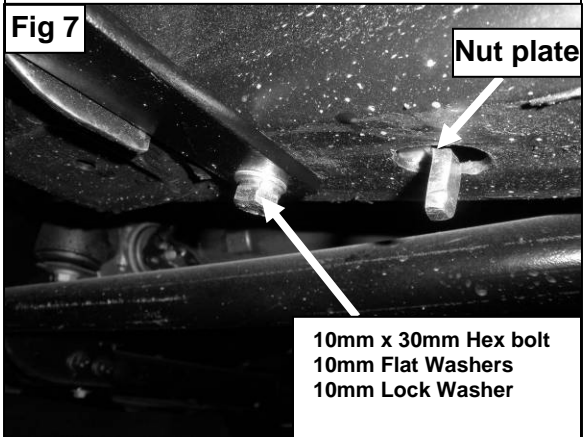


**2011 2500 Model Center Installation Pictured**

**Fig 7A**

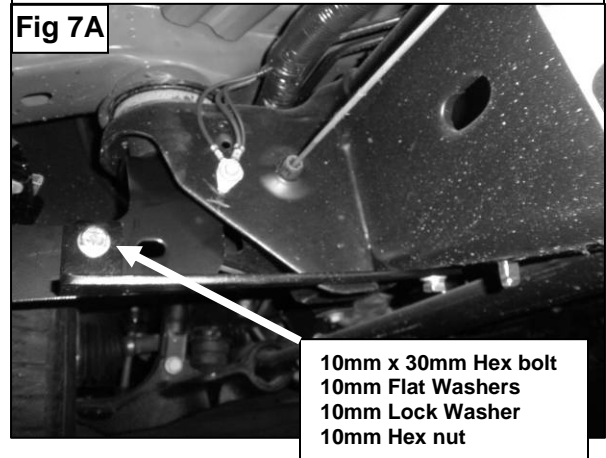


**1500 Model Center Installation Pictured**

**Fig 8**

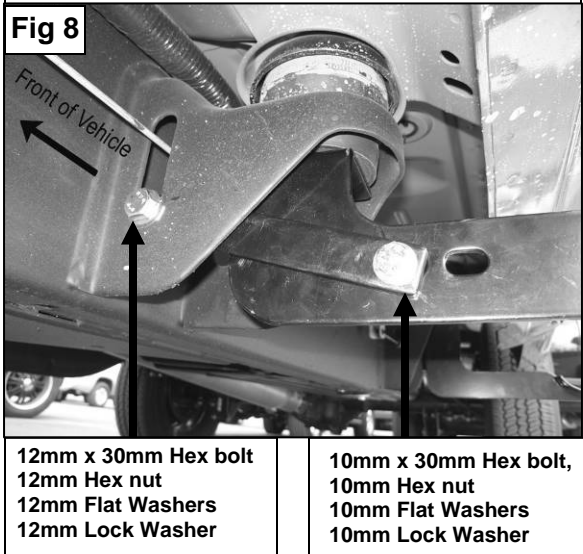


**99-10 2500 Model Center Installation Pictured**

**Fig 9**

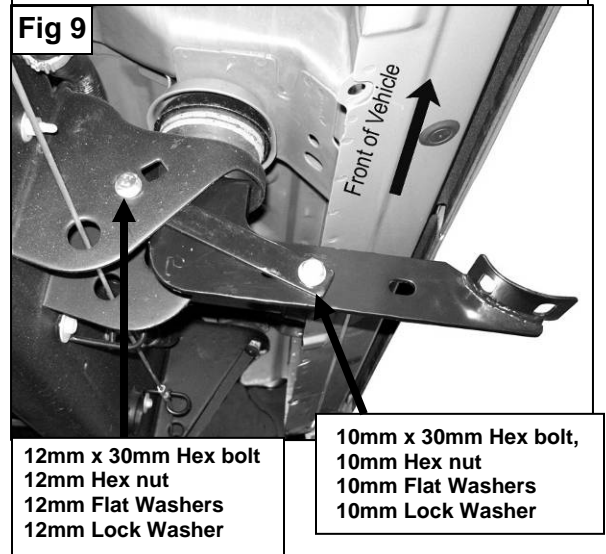


**2011 2500 Model Center Installation Pictured**

**Fig 10**

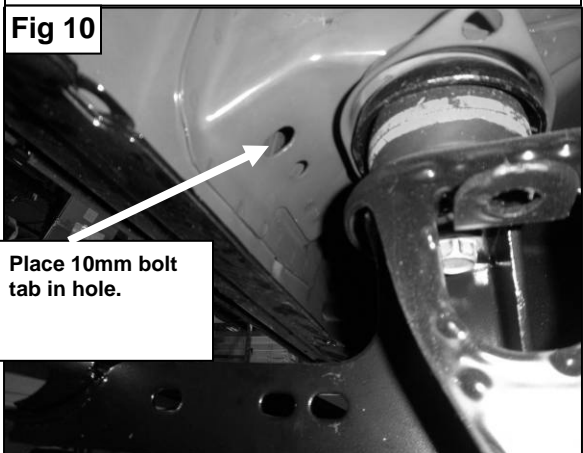


**2011 2500 Model Center Installation Pictured**

**Fig 10A**

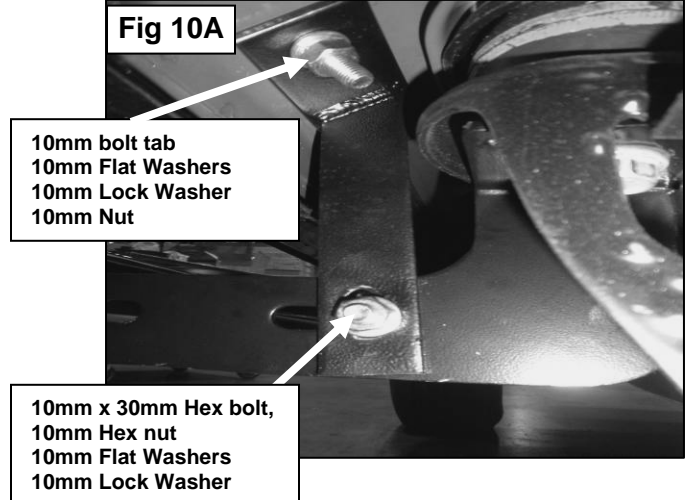

**Fig 11**

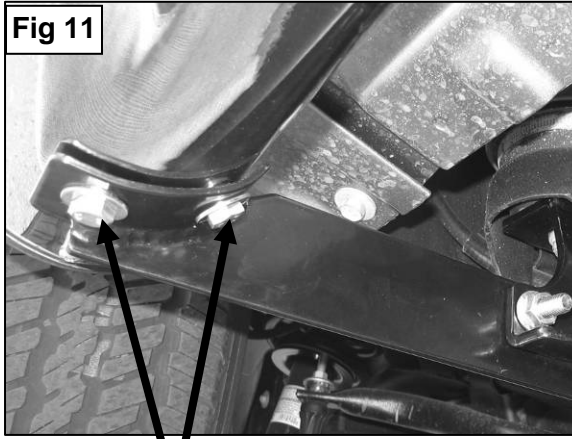

10mm x 30mm Hex bolt,  
10mm Lock Washer  
10mm Flat Washer

**Installation Complete**

