



INSTALLATION INSTRUCTIONS  
4067/4067-2  
2007 GMC YUKON GRILL/BRUSH GUARD

HARDWARE KIT:

- (1) GRILL GUARD
- (2) BRACKETS
- (2) BOTTOM BRACKETS
- (2) BOTTOM END BRACKETS
- (10) M12 X 30mm HEX HEAD BOLTS
- (24) M12 FLAT WASHERS
- (12) M12 NYLOC HEX NUTS
- (2) M12 X 120mm HEX HEAD BOLTS
- (2) M6X 20 HEX HEAD BOLTS

PROCEDURE:

- 1- REMOVE CONTENTS FROM BOX AND CHECK FOR DAMAGE. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.
- 2- REMOVE (2) PLASTIC RETAINER TOWHOOK COVERS LOCATED AT LOWER END OF FRONT BUMPER (PASSENGER SIDE SHOWN) SEE FIG#1
- 3- INSTALL (1) BOTTOM BRACKET (1) BOTTOM END BRACKET USING (2) M12 X 30mm HEX HEAD BOLTS (2) M12 NYLOC HEX NUT (4) M12 FLAT WASHERS. THEN INSTALL (1) M12 X 120mm HEX HEAD BOLT (1) M12 NYLOC NUT (2) M12 FLAT WASHERS, ADJUST BOTTOM BRACKET DOWN THEN TIGHTEN. (DRIVER SIDE SHOWN) SEE FIG.# 2  
**NOTE: FOR EXISTING TOWHOOKS. REMOVE (2) M12 X 30mm HEX HEAD BOLTS (2) M12 NYLOC HEX HEAD NUTS (4) M12 FLAT WASHERS FROM HARDWARE KIT AND USE EXISTING TOWHOOKS AND HARD WARE FOR BOTTOM AND BOTTOM END BRACKET INTALLATION.**
- 4- REPEAT PROCEDURE #3 ON OPPOSITE SIDE.
- 5- INSTALL GRILL GUARD ON TO DRIVER AND PASSENGER BOTTOM BRACKET ASSEMBLIES USING (6) M12 X 30 HEX HEAD BOLTS (6) M12 NYLOC NUTS (12) M12 FLAT WASHERS LEAVE LOOSE, SEE FIG. #2 (DRIVER SIDE SHOWN).
- 6- OPEN HOOD FOR ACCESS, REMOVE (2) EXISTING BOLTS LOCATED INSIDE OF GRILL MOUNT AND SET ASIDE (DRIVER SIDE SHOWN) SEE FIG #3. INSTALL DRIVER/PASSENGER TOP BRACKET USING EXISTING BOLTS. THEN BOLT TOP BRACKETS (DRIVER/PASSENGER) ON TO

GRILL GUARD USING (2) M12 X 20mm HEX HEAD BOLTS LEAVE LOOSE.  
SEE FIG # 3.  
7- LEVEL AND ADJUST GRILL GUARD AS DESIRED AND TIGHTEN

PLASTIC RETAINER  
TOWHOOK COVER



FIG# 1


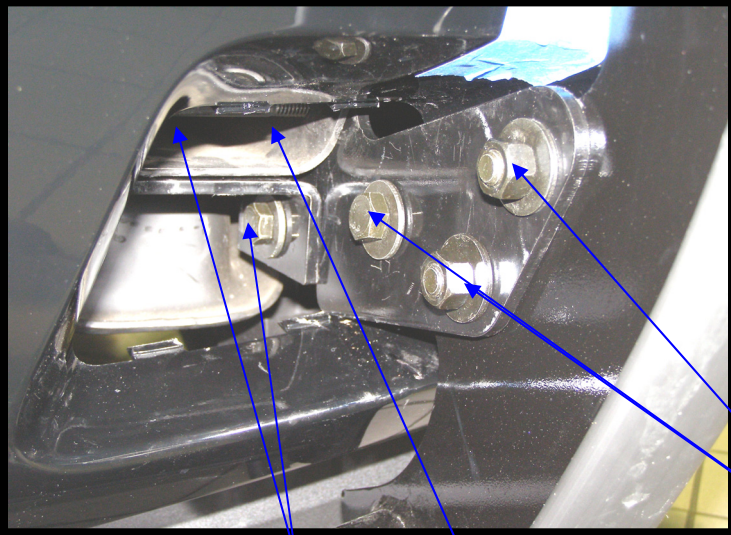


FIG #2

M12 X 30 mm  
HARDWARE


M12 X 120mm  
HARDWARE

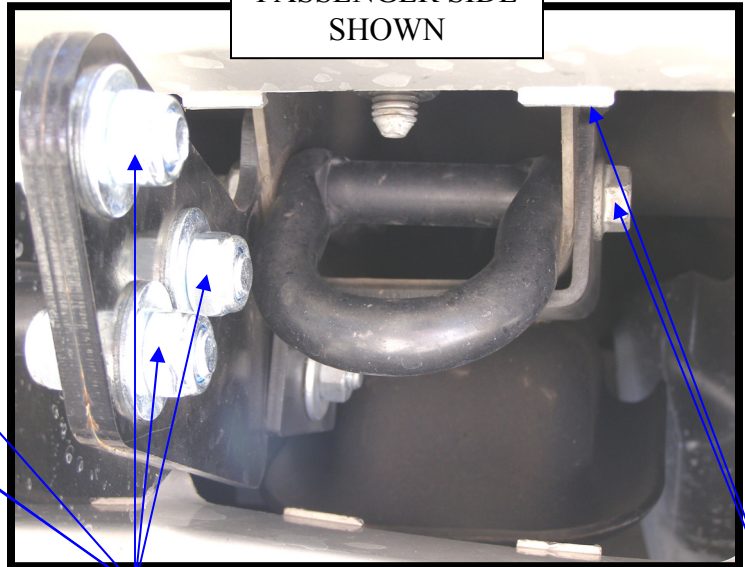

PASSENGER SIDE  
SHOWN

M12 X 30mm HARDWARE

EXISTING BOLTS

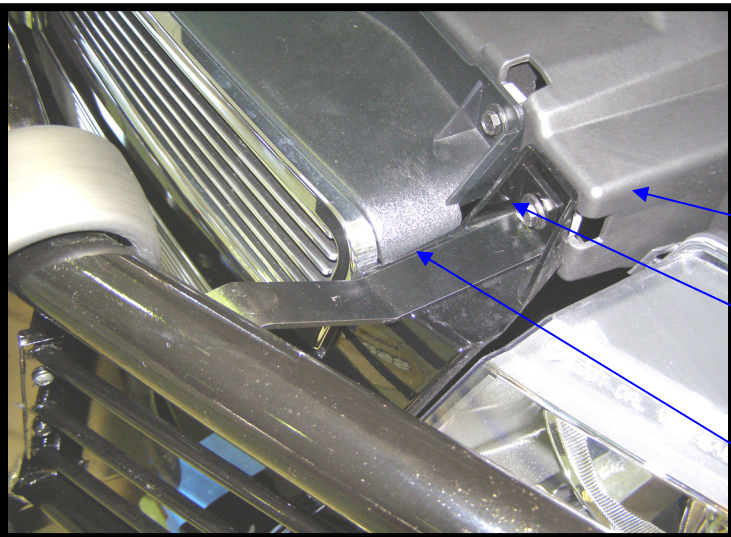

GRILL MOUNT

EXISTING BOLT

TOP BRACKET

FIG #3