


INSTALLATION INSTRUCTIONS

GRILLE GUARD 07-10 CHEVY SILVERADO 2500 HD 4069/4069-2

PARTS LIST:

1	Grille Guard	6	12-1.75mm x 30m Hex Head Bolts
1	Driver/Left Mounting Bracket (A)	6	12mm Nylock Nut
1	Passenger/Right Mounting Bracket (B)	12	12mm ID x 30mm OD x 3mm Flat Washers
1	Driver/Left Top Bracket (C)	2	10-1.50mm x 30mm Button Allen Head Bolts
1	Passenger/Right Top Bracket (D)	2	10mm Nylock Nuts
		2	10mm ID x 26mm OD x 3mm Flat Washers

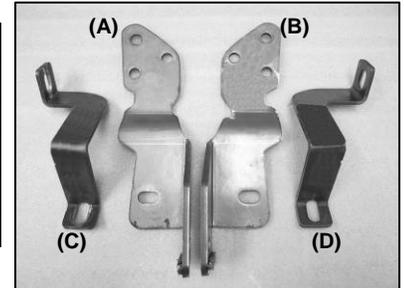

PROCEDURE:

- REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- From underside of vehicle, remove the two bolts holding the passenger factory tow hook, then remove tow hook from vehicle and set aside.
- Determine driver and passenger side Mounting Brackets. From behind of factory bumper, slide passenger side Mounting Bracket through factory tow hook cavity (Fig 1). **NOTE:** Refer to Figure above for bracket configuration.
- Insert factory tow hook back into frame. Secure Passenger Mounting Bracket to frame using the same bolts to install the tow hook (Fig 2). Do not tighten at this time.
- Repeat step 2-4 for driver side Mounting Bracket.
- Open the hood and using a flat screw driver remove the eight fasteners from plastic shroud located on top of the radiator. Remove plastic shroud and set aside.
- Remove the four screws across the top of grille shell, and then using a pair of "needle nose" pliers squeeze the six grille mounting clips behind grille shell. Begin from one end of the grille shell and insert a small screwdriver into the clips to prevent them from popping back into place (Fig 3). Remove the grille by pulling on it gently and evenly forward. Set grille shell aside.
- Locate the two top existing frame bolts and remove them from vehicle. Position Top Brackets onto frame and secure them using the previously removed frame bolts (Fig 4). Do not tighten at this time.
- Re-install grille shell by reversing step 7.
- With help position Grille Guard on the outer side of Mounting Brackets. Align holes on the Mounting Brackets with holes on the Grille Guard.
- Attach Grille Guard to Mounting Bracket using the included (6) 12mm x 30mm Hex Head Bolts, (6) 12mm Nylock Nuts, and (12) 12mm Flat Washers (Fig 5). Do not tighten at this time.
- Attach Grille Guard to Top Brackets using the included (2) 10mm x 30mm Button Allen Head Bolts, (2) 10mm Nylock Nuts, and (2) 10mm Flat Washers (Fig 6). **NOTE:** Insert Button Head bolt from the outer side of plate. Do not tighten at this time.
- Level and adjust Grille Guard, then tighten all hardware at this time.
- Reinstall the plastic shroud back onto vehicle.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

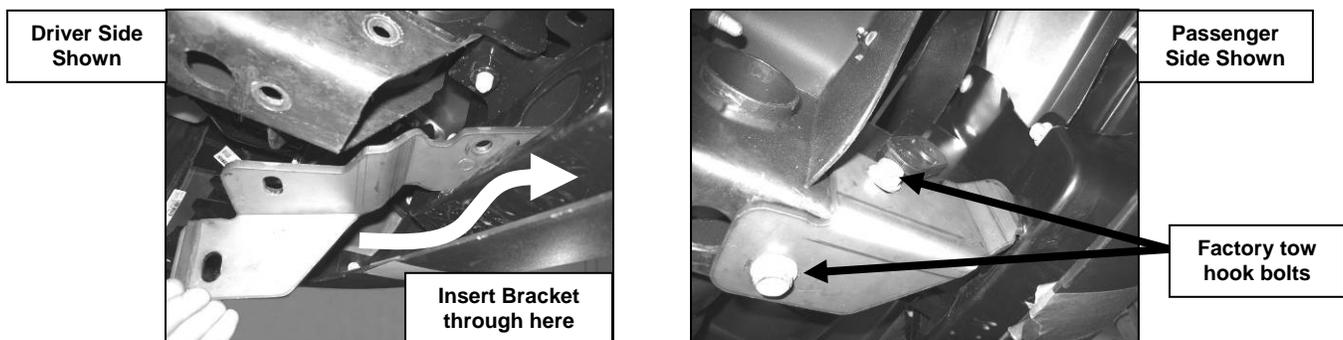


Figure 2


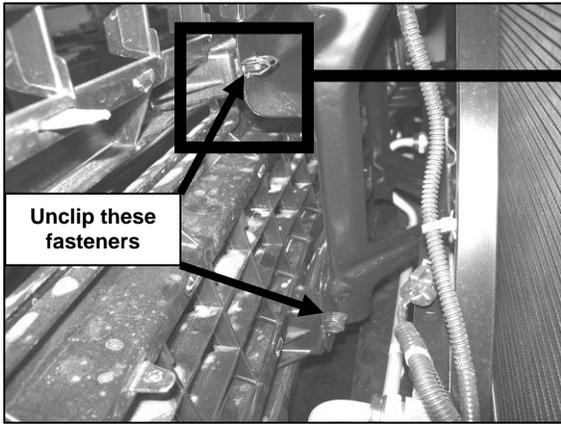


Figure 3

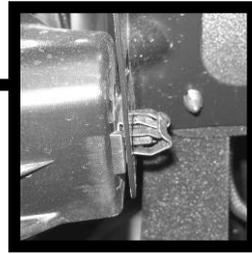

Factory Bolt

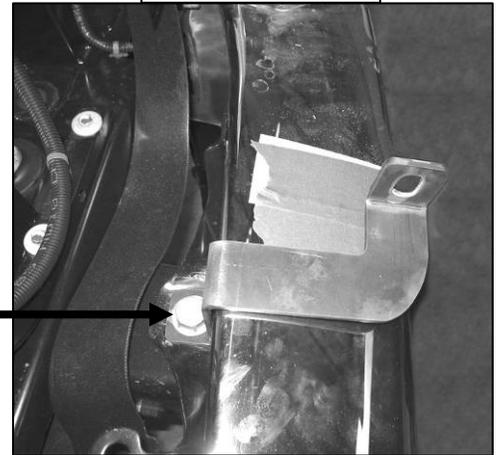


Figure 4

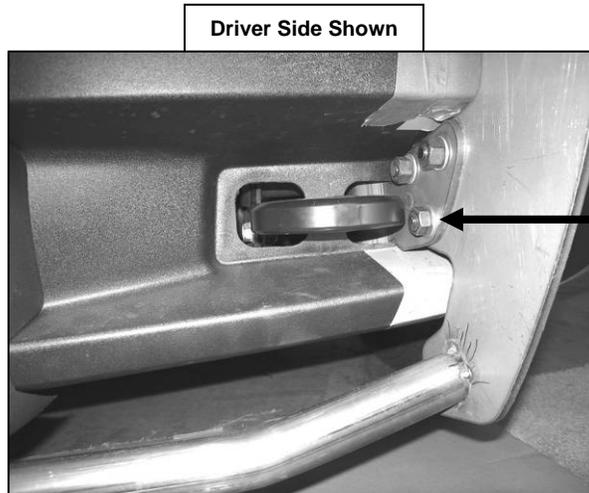


Figure 5

10mm x 30mm Hex Head Bolt, 10mm Flat Washer, 10mm Nylock Nut

Grille Guard Plate

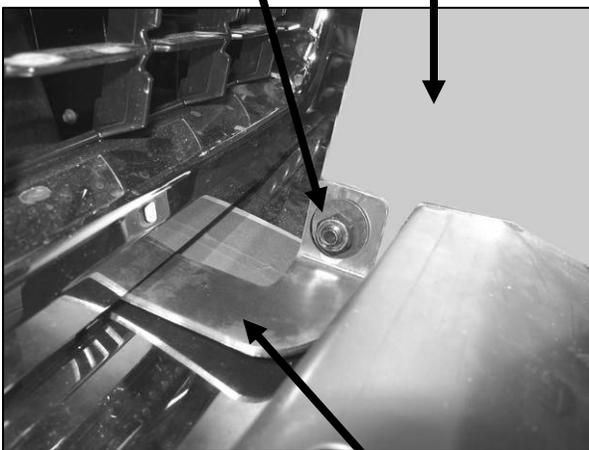


Figure 6

Driver Side Top Bracket Shown



Figure 7