




INSTALLATION INSTRUCTIONS

GRILLE GUARD PART#4072-2/4072

07 SUBURBAN ¾" TON 4x4

PARTS LIST:

1	Grille Guard	2	6-1.00mm x 20mm Allen Bolts
1	Passenger Side Mounting Bracket (A)	2	6mm Lock Washers
1	Driver Side Mounting Bracket (B)	2	6mm Flat Washers
1	Passenger Side Top Bracket (C)	6	12-1.75mm x 30mm Hex Head Bolts
1	Driver Side Top Bracket (D)	6	12mm Nylock Nuts
		12	12mm Flat Washers

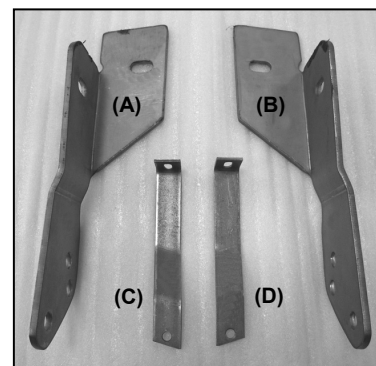

PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. From underside of vehicle, remove tow hooks.
3. Once the tow hook has been removed from vehicle, remove the existing plastic trim around the tow hook (Figure 1). **NOTE:** You will not be re-installing the plastic trim.
4. Re-insert tow hooks back into place
5. Insert driver side Mounting Bracket the same way you re-inserted the tow hooks, on the underside and outer side of frame (Figure 2). **NOTE:** The three holes should be in a vertical position and Mounting Bracket mounted on the outer side of frame.
6. Attach Driver Side Mounting Bracket and factory tow hook to frame using the factory tow hook bolts (Figure 2). Do not tighten at this time.
7. Repeat steps 4 & 5 for passenger side.
8. Locate driver side Top Bracket. Attach inner side of Top Bracket to existing bolt holding the color grille shell (Figure 3). Repeat this step for passenger side.
9. With help position Grille Guard on the inner side of Mounting Brackets. Attach Grille Guard to Mounting Brackets using the included (6) 12-1.75mm x 30mm Hex Head Bolts, (6) 12mm Nylock Nuts, and (12) 12mm Flat Washers. Do not tighten at this time.
10. Attach opposite side of Top Brackets to the top bar on the brush guard using the included (2) 6-1.00mm x 20mm Allen Bolts (Figure 3).
11. Level and adjust Grille Guard as desired; then tighten all hardware at this time.
12. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

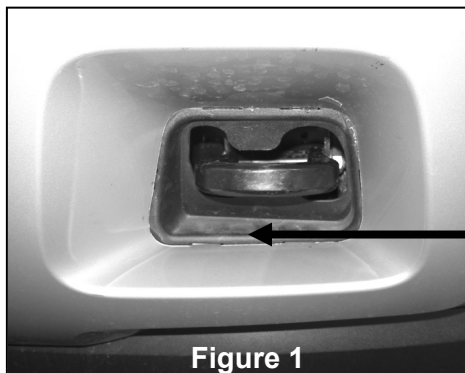


Figure 1

After you removed tow hooks from vehicle, remove & trim or remove & leave off this plastic around tow hook

(Driver Side Shown)

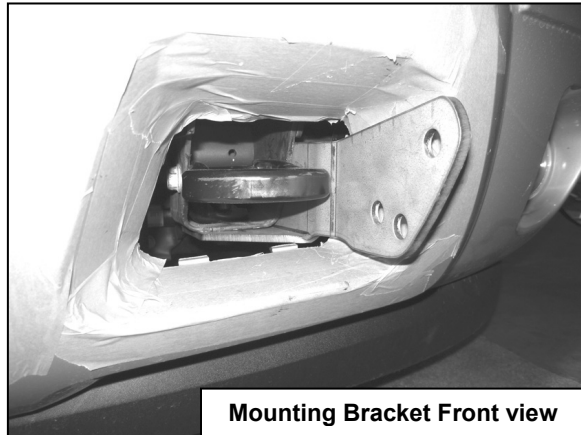


Figure 2

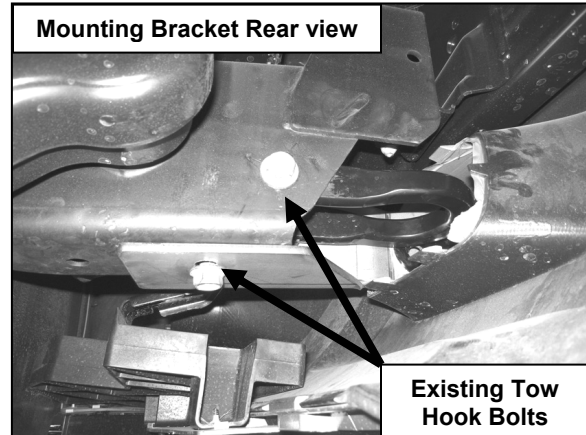


Figure 3

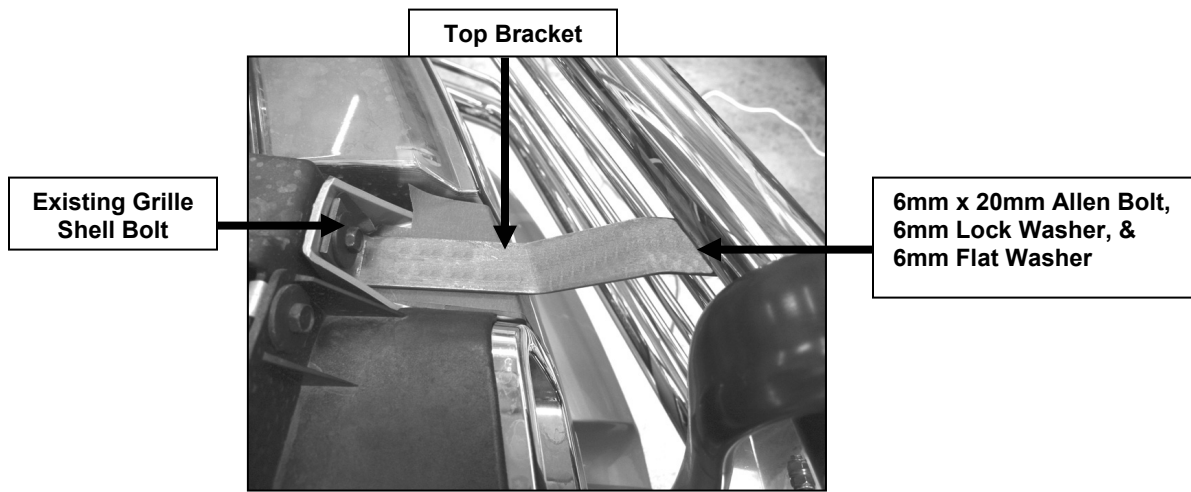


Figure 4



Figure 5

12mm x 20mm Hex Bolts,
12mm Nylock Nuts, &
12mm Flat Washers

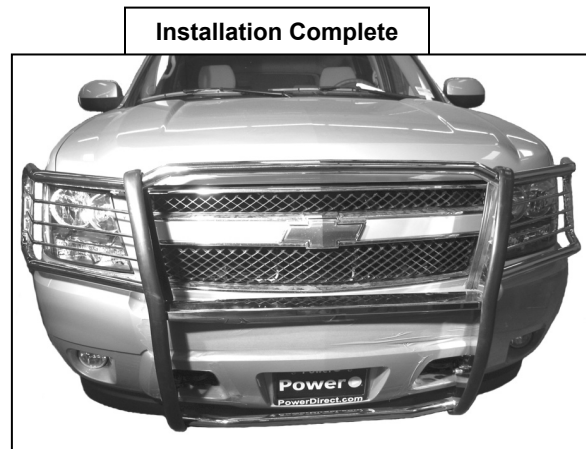


Figure 6