



INSTALLATION INSTRUCTIONS

GRILL/ BRUSH GAURD PART #6049
2005-06 HONDA CRV

PARTS LIST

- | | |
|---------------------------|----------------------------------|
| (1) FRONT BAR | (16) 7/16" FLAT WASHERS |
| (2) FRAME MOUNT BRACKETS | (6) 7/16" HEX LOCK NUTS |
| (1) TOP SUPPORT BRACKET | (2) 1/4" x 3/4" SCREWS |
| (10) 7/16 x 1 ¼ HEX BOLTS | (1) ¼ HEX NUT |
| (1) 1/4 NUT PLATES | (2) 1/4 WASHERS |
| (2) 7/16 NUT PLATE | (2) 5/16 x 1" SELF TAPPING BOLTS |
| (2) 5/16 WASHERS | |

PROCEDURE


1. Remove the plastic rivets securing the plastic guard located underneath the vehicle in order to install the front bar.
2. Start with the passenger side assembly, position one of the 7/16 nut plates behind the cross member opening and align the 7/16 nut plate with the two matching holes in the frame rail. Fasten the frame brackets to the bottom cross member as shown in the illustration using the 7/16 x 1 ¼ hex bolts, 7/16 washers, 5/16 self tapping bolt and 5/16 washers. Note: Do not over tighten 5/16 x 1 self tapping bolt as it might strip threads.
3. Open hood and remove the rivets securing the top plastic trim panel and remove the trim panel (temporarily) from the vehicle.
4. Attach top bracket support to the cross member existing hole using the 1/4 nut plate and 1/4 x ¾ screw as shown in illustration.
5. Using a utility knife, carefully cut slots on the plastic trim panel and the plastic guard underneath the vehicle to fit around the top bracket support and frame brackets.
6. Re-attach the plastic guard
7. Attach front bar assembly to the lower brackets (inner edge) using the 7/16 x 1-1/4" hex bolts, 7/16 hex nuts, washers, and the top support bracket using the ¼ x ¾ screws, hex nuts, and washers.
8. Align front bar assembly with front of vehicle and secure all fasteners.

SEE DIAGRAM BELOW

CUSTOMER SERVICE 888-800-ARIES

ILLUSTRATION 2002-04
HONDA CRV
PART #6046

Top Support Assembly

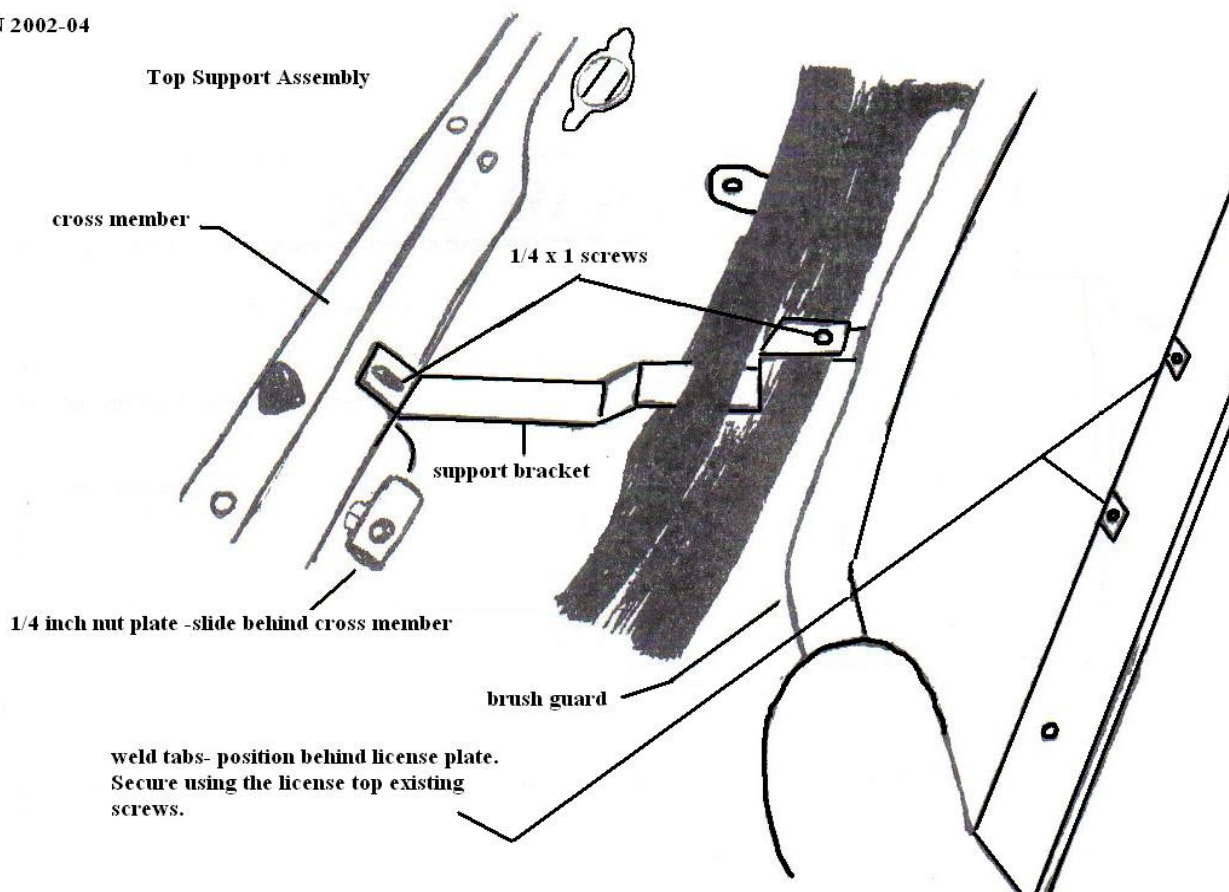

PASSENGER SIDE ASSEMBLY

