



Installation Instructions

Rock Slider

Product Number: G1150-G1151

Application: Jeep LJ 2004-2006

SAFETY

Your safety and the safety of others is very important.

- In order to help you make informed decisions about safety, we have provided installation instructions and other information.
- These instructions alert you to potential hazards that could hurt you or others.
- Please do a job safety analysis (JSA) before each task to identify potential hazards for your situation and remove/protect against them.
- You must use your own good judgment, and take your time.

Read and understand all safety precautions and instructions before installing this product.

THIS PRODUCT IS FOR OFFROAD USE ONLY. ALL LIABILITY FOR INSTALLATION AND USE RESTS WITH THE PURCHASER.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE.

Injury Hazard

Failure to observe these instructions could lead to severe injury or death.

- Always** remove jewelry and wear eye protection.
- Always** use extreme caution when jacking up a vehicle for work. Set emergency brake and use tire blocks. Locate and use the vehicle manufacturers designated lifting points. Use jack stands.
- Always** use appropriate and adequate care in lifting components into place.
- Always** insure components will remain secure during installation and operation.
- Always** wear safety glasses when installing this kit. A drilling operation will cause flying metal chips. Flying chips can cause serious eye injury.
- Always** use extreme caution when drilling on a vehicle. Thoroughly inspect the area to be drilled (on both sides of material) prior to drilling, and relocate any objects that may be damaged.
- Always** use extreme caution when cutting and trimming during fitting.
- Always** tighten all nuts and bolts securely per installation instructions.
- Always** route electrical cables carefully. Avoid moving parts, components that become hot and rough or sharp edges.
- Always** insulate and protect all exposed wiring and electrical terminals.
- Always** perform regular inspections and maintenance on mounts and related hardware.
- Loctite** all fasteners.





Installation Instructions

Rock Slider

Product Number: G1150-G1151

Application: Jeep LJ 2004-2006

I. Overview

Congratulations on your new purchase of the industries' best Jeep Rock Sliders! These Rock Sliders have been **engineered** for toughness with a double wall bottom for protection of your side panels. This product has also been **engineered** for ease of installation (no trimming of standard Jeep parts required).

Your Rock Sliders have been CNC laser cut, received a four stage phosphate bath and baked-on powder coat finish.

Enjoy the fit and finish of quality Jeep Rock Sliders from Fab Fours Inc!



See you on the trail!





Installation Instructions


Rock Slider

Product Number: G1150-G1151

Application: Jeep LJ 2004-2006

II. Parts List



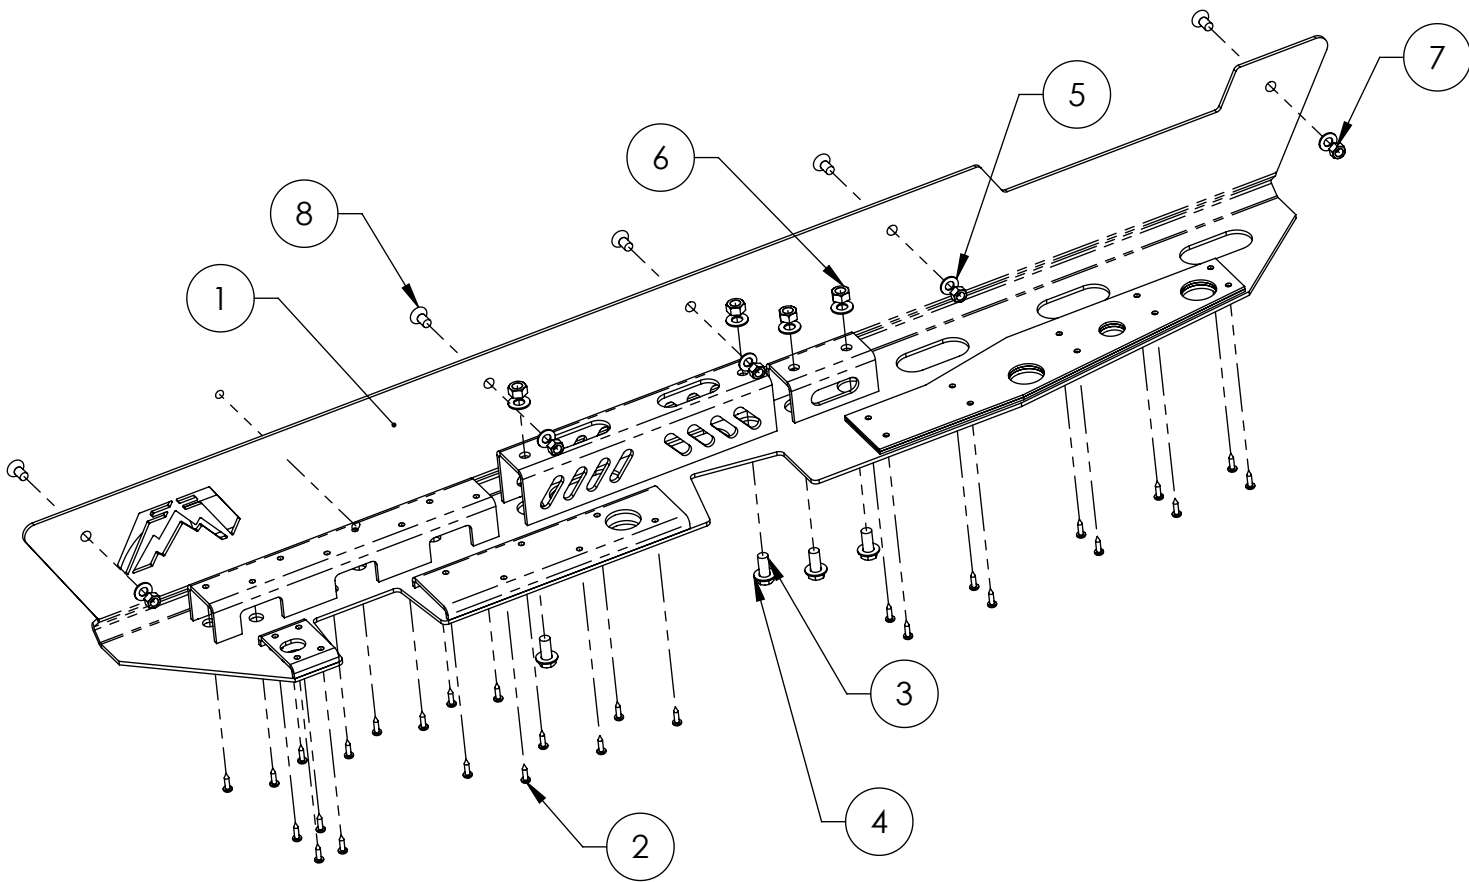

ITEM NO.	DESCRIPTION	G1150/QTY.
1	G1150, LJ Rock Slider, Driver	1
2	10 -24 UNC THREAD x ¾" LENGTH TYPE A PAN HEAD PHILLIPS TAPPING SCREW	56
3	0.4375 -14 UNC THREAD x 1" LENGTH HEX HEAD CAP SCREW	8
4	0.4375" SCREW DIA, SAE STANDARD FLAT WASHER	16
5	0.375" SCREW DIA, SAE STANDARD FLAT WASHER	10
6	0.4375" -14 THREAD HEX NUT	8
7	0.375" -16 THREAD HEX NUT	10
8	0.375 -16 UNC THREAD x ¾" LENGTH FLAT HEAD SOCKET CAP SCREW	10
9	G1150, LJ Rock Slider, Pass	1



Installation Instructions

Rock Slider

Product Number: G1150-G1151


Application: Jeep LJ 2004-2006

III. Tools Required

- Electric Drill
- 3/8" Drill bit
- 1/2" Drill bit
- Socket Wrench with extension
- 5/16" Socket 1/4" Drive
- 11/16" Socket 3/8" drive
- 9/16" Socket
- 8mm Socket
- 5/8" Open end wrench
- 9/16" Open end wrench
- 7/32" Allen wrench
- Nut driver for drill 1/4"
- Center punch
- Hammer
- Floor jack
- Block of wood (e.g.. 2x4, 4x4)
- T30 Torx (Rubicon Only)
- 10mm Socket (Rubicon Only)

IV. Vehicle Preparation

- A) Remove screws along the bottom of rocker attaching plastic body cladding or fender flare extensions. First 2 screws in rear and first 3 in front.
- B) Remove fender flare extension or body cladding by gently pushing upward.
- C) Drill out rivets on metal strip and discard (Sahara model only).
- D) Remove the lower three screws located towards the middle of the vehicle attaching the rear fender flare (Picture #1).
- E) Pull back and or remove any carpet located on the outside of the seat bracket and also any located along the kick panel.
- F) Complete steps A thru E for the opposite side.

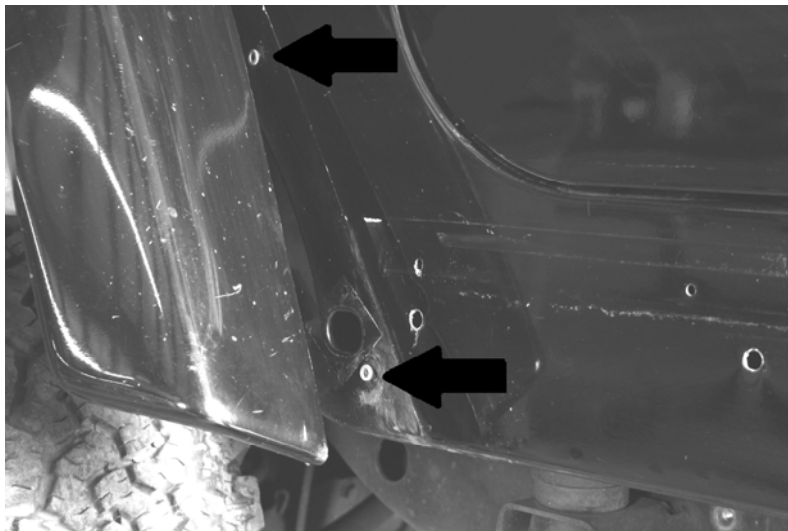

Picture #1





Installation Instructions

Rock Slider

Product Number: G1150-G1151

Application: Jeep LJ 2004-2006

V. Rocker Guard Installation

- A) Lift the Rock Slider into place with the floor jack while pulling the rear fender flare away from the body, to allow Rock Slider edge clearance.

Notes:

- Use wood spacer on jack to protect Rock Slider finish
- Fab Four logo cutout is toward the rear of Jeep
- Review picture #2



Picture #2

- B) Check that Rock Slider is centered between the fender flares and pushed tight against the body panel. A secondary jack like a Hi-Lift may aid in this step.
- C) Jack up one more inch to insure Rock Slider is tight to bottom of Jeep.
- D) Mark the middle two horizontal counter sunk holes with the center punch. Drill the two holes (1/2" bit.) Install two counter sunk bolts (B1) with flat washers (B2), lock nuts (B3), and tighten.
- E) Mark and drill the other three horizontal counter sunk holes.





Installation Instructions

Rock Slider

Product Number: G1150-G1151

Application: Jeep LJ 2004-2006

- F) Complete installation of the three remaining horizontal counter sunk bolts (B1) with washers (B2), lock nuts (B3), and tighten.
- G) Remove the floor jack.
- H) Center punch the four holes that pass through the bottom of the Rock Slider to the bottom of the floor pan (see exploded view of Rock Slider on page 3 for location). Drill out marks with the 7/16" drill bit.
- I) Insert the four 7/16" hex bolts (B5) through the floor and into the Rock Slider. Install the flat washers (B6) the lock nuts (B7) and tighten.
- J) Install 28 self drilling and tapping screws (B8) through the bottom of the Rock Slider and into the floor pan. (see exploded view of Rock Slider on page 3 for location) Loctite all fasteners.
- L) Re-install the interior carpet pieces.
- M) Re-install the two screws in the rear fender flare and three in front flare

Optional; in order to prevent road salt and grit from getting between the Rock Slider and the body, you can seal the connection at this time with silicone gel. Remove Rock Slider and put a bead of silicone around the edges (1/2" from edge) and around all holes, then re-mount.

- N) Complete steps A-M on the opposite side of the vehicle.





Installation Instructions

Rock Slider

Product Number: G1150-G1151

Application: Jeep LJ 2004-2006

VI. Maintenance/Care

- Periodically check and tighten any nuts that appear to be loose.
- Stripped, fractured, or bent bolts or nuts need to be replaced.

VII. Contact Information

Fab Fours Inc.
10424 Rodney St.
Charlotte, NC 28134

Phone (866)-385-1905
Fax (866)-574-1424
Email Support@fabfours.com



More than expected... Better than expected

