

# ARIES OFFROAD

## INSTALLATION INSTRUCTIONS 2006-10 H3 (DOES NOT FIT WITH ROCKER BAR) PART # 204076 / 204076-2

<u>QTY.</u>	<u>CONTENT</u>
1	DRIVER SIDE TUBE
1	PASSENGER SIDE TUBE
2	DRIVER SIDE BRACKETS BRACKETS
2	PASSENGER MOUNTING BRACKETS
8	M10 X 30MM SERRATED HEX HEAD BOLT
8	M10 x 25MM HEX HEAD BOLTS
8	M10 LOCK WASHERS
8	M10 FLAT WASHERS

**STEP 1** REMOVE CONTENTS FROM BOX AND VERIFY ALL PART ARE PRESENT. READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING.

**STEP 2** SIDEBAR SET CONSISTS OF A DRIVER AND PASSENGER SIDE. THE REAR STEP IS THE CLOSEST TO THE BEND. BE SURE TO DETERMINE THE CORRECT SIDE BEFORE MOUNTING.


**STEP 3** SEE DIAGRAM A. LIFT DRIVER SIDE BRACKETS TO FRAME, ALIGNING HOLES A & B

**STEP 4** INSTALL DRIVER BRACKETS WITH FOUR M10 X 30 SERRATED HEX BOLTS

**STEP 5** ATTACH DRIVER SIDE TUBE TO BRACKETS WITH M10 X 25MM HARDWARE.

**STEP 6** REPEAT STEPS FOR PASSENGER SIDE.

**STEP 7** PERIODICALLY CHECK BOLTS, AS THEY MAY NEED TO BE RE-TIGHTENED.

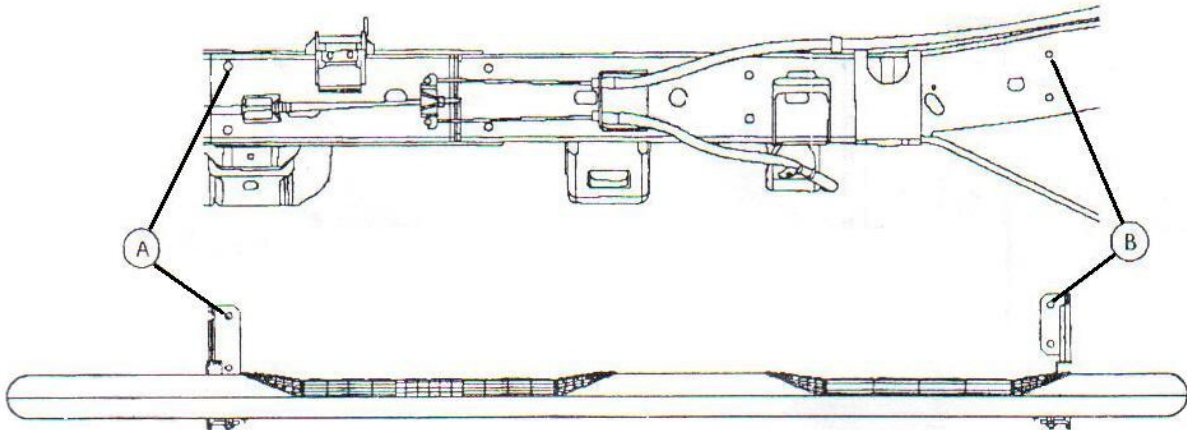

**FINISH PROTECTION-** ARIES PRODUCTS HAVE A HIGH FINISH THAT MUST BE MAINTAINED SUCH AS ANY OTHER HIGH FINISH PRODUCT ON THE VEHICLE. PROTECT THE FINISH WITH A NON-ABRASIVE AUTOMOTIVE WAX. THE USE OF SOAP, POLISH, OR WAX THAT CONTAINS ABRASIVES IS DETRIMENTAL, AS THE COMPOUNDS SCRATCH THE FINISH AND OPEN IT TO CORROSION.

**DISCLAIMER-** BUYER ASSUMES ALL RISK AND LIABILITY WHATSOEVER FROM THE INSTALLATION AND USE OF ARIES PRODUCTS. ARIES PRODUCTS ARE SOLD AS DECORATIVE ACCESSORIES AND SHOULD NOT BE RELIED UPON AS PROTECTION FOR THE VEHICLE OR OCCUPANTS IN THE EVENT OF A COLLISION OR ROLL OVER. ARIES AUTOMOTIVE ASSUMES NO LIABILITY FOR INJURY, LOSS, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN THE EVENT OF A COLLISION OR ROLLOVER.