



INSTALLATION INSTRUCTION
4 INCH STRAIGHT OVAL SIDE BAR Part# 229008
NISSAN X-TERRA 05-11

Note and Products Care:

- λ Pictures are only for reference. Actual products may be slightly different but installation is the same.
- λ Read Carefully the instruction sheet before installing. Take good care of your vehicle when installing to prevent any scratch.
- λ Check periodically to see if there's any loose bolts and nuts to ensure safe driving. Protect the finish with a non-abrasive automotive wax on a regular basis.

Part list:


NO.	NAME	QTY	REMARKS	NO.	NAME	QTY	REMARKS
①	Side bar	2		⑤	Big washers	24	8mm
②	L- Mount bracket	3		⑥	Lock washer	12	8mm
③	R- Mount bracket	3		⑦	Lock nut	12	M8
④	Hex bolt	12	M8×25				

Assembly procedure:

Step 1: Check all the contents are available in accordance with the above list (Parts list).

Step 2: Install the mounting bracket using ⑤ ⑦ and factory threaded studs.

Step 3: Install the side bar to mounting bracket using ④ ⑤ ⑥.

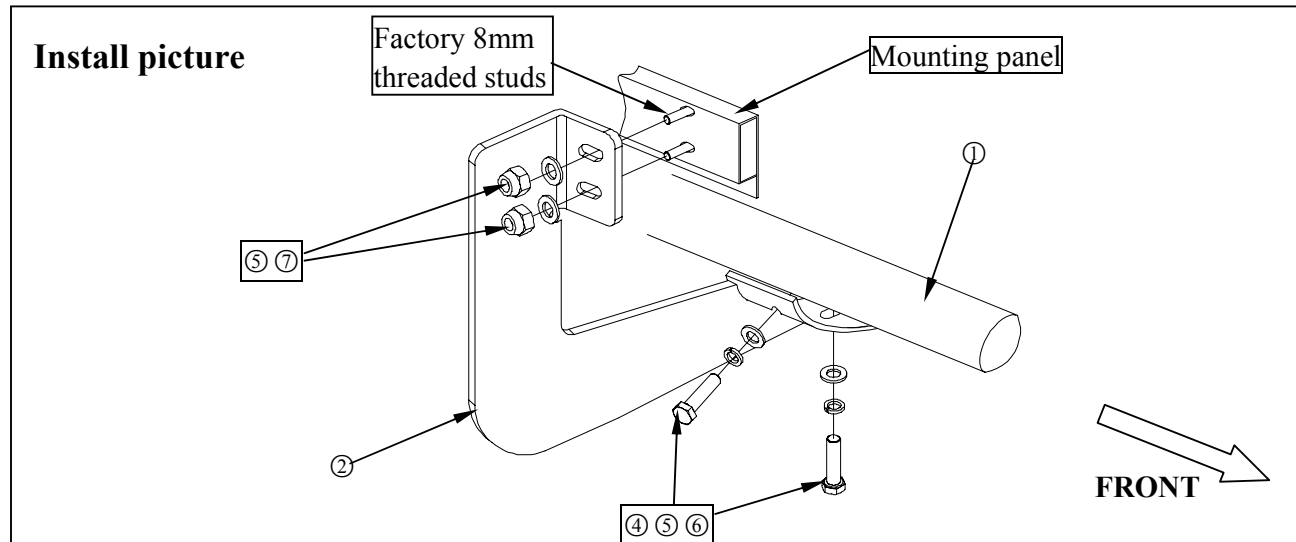

Step 4: After checking for proper clearance and alignment of the side bar on the vehicle, fully tighten all hardware.

Step 5: Installation done.