DOWNEY INSTALLATION INSTRUCTIONS
FJ-40 FRONT DBL. SHOCK KIT #48501-F

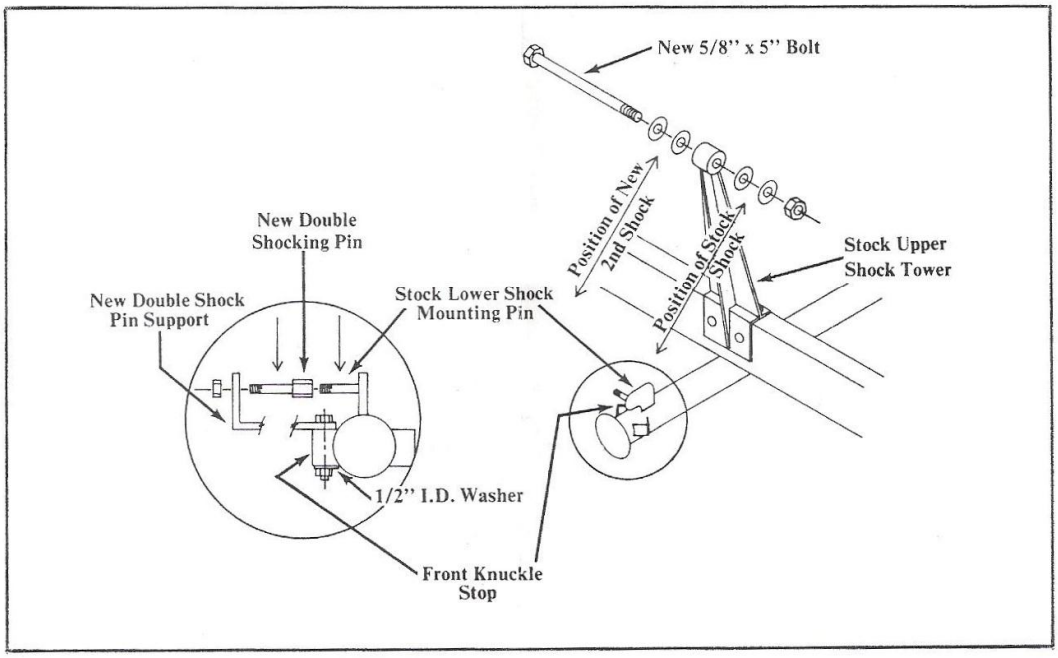

1. Remove the stock shocks from both sides of the vehicle.

2. Remove the stock shock mounting pin from the upper shock tower. *(The double shocks will ride on the new 5/8" x 5" bolt, one shock on each side of the shock tower.)*

3. Widen the stock opening in the inner fender apron by cutting out a section approximately 3" to 4" forward of the stock cutout. When you are finished, the cutout should provide sufficient clearance with two shocks installed.

4. Install both shocks onto upper shock tower using the 5/8" x 5" bolt and one washer on each side of each shock. Attach bottom of rear shock onto the stock lower shock mounting pin using the two stock washers.

5. Screw new double shock pin onto end of lower shock mounting pin until tight.

6. Install second shock onto new lower shock mounting pin, using two washers, one on each side of the shock.

7. Install shock pin supports onto double shock pin and front knuckle stops as illustrated above. Install and tighten all nuts and bolts.

8. Repeat steps 2-7 for opposite side of your Landcruiser.

562 562
DOWNEY OFF ROAD MFG., 10001 S. Pioneer Blvd., Santa Fe Springs, CA. 90670, Phone ~~213~~-949-9494, FAX ~~213~~-949-5718