

INSTALLATION GUIDE



Part#: 021202

HARDCORE LIMITED LIFETIME WARRANTY

2" Front Spacer Kit


Chevy Tahoe/Silverado | 2014

Rev. 121813

491 W. Garfield Ave., Coldwater, MI 49036 • Phone: 517-279-2135

Web/live chat: www.bds-suspension.com • E-mail: tech@bds-suspension.com

Read And Understand All Instructions And Warnings Prior To Installation Of System And Operation Of Vehicle.

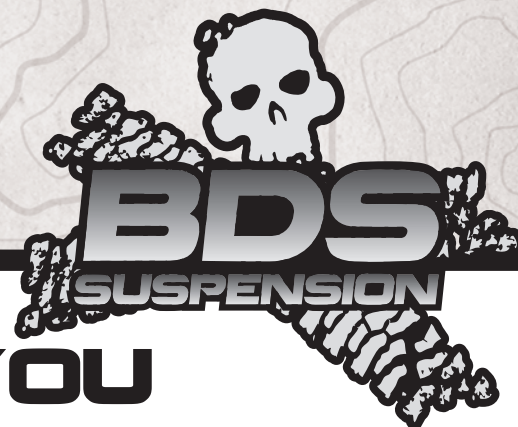

THANK YOU

Your truck is about to be fitted with the best suspension system on the market today. That means you will be driving the baddest looking truck in the neighborhood, and you'll have the warranty to ensure that it stays that way for years to come. Thank you for choosing BDS Suspension!

BEFORE YOU START

BDS Suspension Co. recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly/ reassembly procedures and post installation checks must be known.

FOR YOUR SAFETY

Certain BDS Suspension products are intended to improve off-road performance. Modifying your vehicle for off-road use may result in the vehicle handling differently than a factory equipped vehicle. Extreme care must be used to prevent loss of control or vehicle rollover. Failure to drive your modified vehicle safely may result in serious injury or death. BDS Suspension Co. does not recommend the combined use of suspension lifts, body lifts, or other lifting devices. You should never operate your modified vehicle under the influence of alcohol or drugs. Always drive your modified vehicle at reduced speeds to ensure your ability to control your vehicle under all driving conditions. Always wear your seat belt.

BEFORE INSTALLATION

Special literature required: OE Service Manual for model/year of vehicle. Refer to manual for proper disassembly/reassembly procedures of OE and related components.

Adhere to recommendations when replacement fasteners, retainers and keepers are called out in the OE manual.

Larger rim and tire combinations may increase leverage on suspension, steering, and related components. When selecting combinations larger than OE, consider the additional stress you could be inducing on the OE and related components.

Post suspension system vehicles may experience drive line vibrations. Angles may require tuning, slider on shaft may require replacement, shafts may need to be lengthened or trued, and U-joints may need to be replaced.

Secure and properly block vehicle prior to installation of BDS Suspension components. Always wear safety glasses when using power tools.

If installation is to be performed without a hoist, BDS Suspension Co. recommends rear alterations first.

Due to payload options and initial ride height variances, the amount of lift is a base figure. Final ride height dimensions may vary in accordance to original vehicle attitude. Always measure the attitude prior to beginning installation.

BEFORE YOU DRIVE

Check all fasteners for proper torque. Check to ensure for adequate clearance between all rotating, mobile, fixed, and heated members. Verify clearance between exhaust and brake lines, fuel lines, fuel tank, floor boards and wiring harness. Check steering gear for clearance. Test and inspect brake system.

Perform steering sweep to ensure front brake hoses have adequate slack and do not contact any rotating, mobile or heated members. Inspect rear brake hoses at full extension for adequate slack. Failure to perform hose check/ replacement may result in component failure. Longer replacement hoses, if needed can be purchased from a local parts supplier.

Perform head light check and adjustment.

Re-torque all fasteners after 500 miles. Always inspect fasteners and components during routine servicing.

TIRES AND WHEELS

FITMENT GUIDE

285/70R17 with stock wheel



CONTENTS OF YOUR KIT

021201

Part #	Qty	Description
02155	2	Top Spacer
02157	2	Preload Spacer
740	1	Bolt Pack
	6	7/16"-14 x 2-1/2" carriage bolt
	6	7/16"-14 prevailing torque nut
	6	12mm flat washer

TROUBLESHOOTING INFORMATION FOR YOUR VEHICLE

1. Strut compressor required for installation.

**TECH
TIPS**

INSTALLATION INSTRUCTIONS

PRE-INSTALLATION NOTE:

A spring / strut compressor is required for this installation. Do NOT attempt to install this kit without one. Professional installation is highly recommended.

1. Park vehicle on clean, flat, and level surface.
2. Block rear wheels for safety. Raise front of vehicle and support frame rails with jack stands.
3. Remove front wheels, this will aid in installation.
4. Remove sway bar end links where they mount to the control arms. Retain all hardware, bushings, and sway bar links.
5. Work on one side of the vehicle at a time.
6. Support the lower control arm with a hydraulic jack, remove upper ball joint nut, reinstall nut by threading on by hand several turns.
7. Strike the knuckle near the upper ball joint to dislodge it from the knuckle. (Fig 1)

SPECIAL TOOLS

High Quality Strut Compressor

FIGURE 1



FIGURE 2




8. Remove 3 upper nuts holding top of strut to frame mount. (Fig 2). Do NOT remove center nut on strut.
9. Lower hydraulic jack to allow the strut to move freely. Remove lower strut bolts and remove strut from the vehicle (Fig 3), retain hardware. Ensure that the knuckle assembly does not fall outward (it can be reattached to the upper control arm and the nut installed finger tight).

FIGURE 3



FIGURE 4

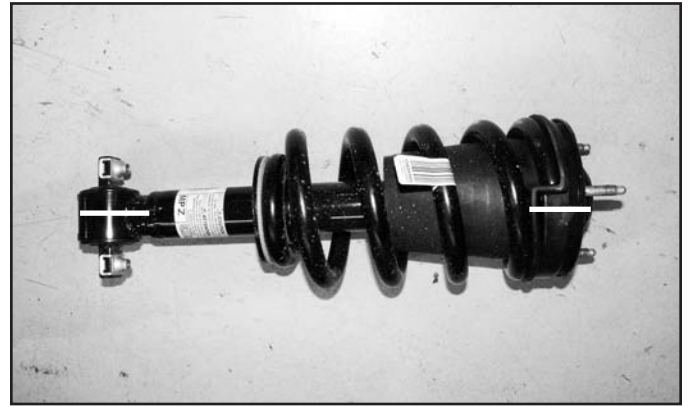

10. Place indexing marks on the strut body, strut cap, and upper coil seat for realignment of the components when the strut is reassembled. (Fig 4)
11. Using an appropriate strut compressor, compress the coil spring and remove the upper strut nut. Remove the strut, strut cap, and upper coil seat from the coil spring. (Fig 5)

! Caution *Coil is under extreme pressure. Improper removal / installation of coil spring could result in serious injury or death. Use only a high-quality spring compressor and carefully read and follow the manufacturer's instructions.*

FIGURE 5



12. Remove the rubber isolator and plastic spacer from the strut cap.
13. Using a hammer, remove the three captive studs from the cap.
14. Drill the captive stud holes out to 7/16" to clear the new bolts that will be installed.
15. Place 1/4" plate (02157) below top plate with 7/16" carriage bolts going thru the assembly. (Figure 6)

FIGURE 6



16. Reassemble strut as it was taken apart by aligning index marks. Fasten the assembly with the OE strut nut. Torque the nut to 35 ft-lbs.
17. Install the provided top spacer (02155) on the new studs. Orientate the plate such that the flat will face towards the inside of the vehicle. (Fig 7)

FIGURE 7



18. Attach strut to upper strut mount first with new hardware (bolt pack #740). Leave hardware loose until the lower bolts are connected.
19. Support the lower control arm with a hydraulic jack. Connect the strut to the lower control arm with the original bolts. Leave bolt loose.
20. Raise lower control arm to reconnect the upper ball joint to the knuckle. Fasten with the OE nut. Torque the upper ball joint nut to 55 ft-lbs.
21. Torque the three upper strut mounting nuts to 50 ft-lbs. Torque lower mounting bolts to 30 ft-lbs.
22. With both sides complete, attach sway bar links to the sway bar and lower control arm. Tighten the sway bar link nuts until the bushings begin to swell.
23. Install the wheels and lower vehicle to the ground
24. Check all hardware for proper torque
25. Check hardware after 500 miles
26. The vehicle WILL NEED a complete front end alignment.
27. Adjust headlights.



WE WANT TO SEE YOUR RIDE!

Grab photos of your BDS-equipped truck in action and send them in for a chance to be featured. Send it in to our Bad Ass Rides customer gallery at bds-suspension.com/bar and post them on the BDS Fan Page on Facebook at facebook.com/BDSSuspensions. Don't forget about your BDS swag! BDS offers t-shirts, hoodies, decals and more available on the BDS website or through your local BDS distributor.

TIME TO HAVE SOME FUN

Thank you for choosing BDS Suspension.

For questions, technical support and warranty issues relating to this BDS Suspension product, please contact your distributor/installer before contacting BDS Suspension directly.