



AIR SUSPENSION SOLUTIONS

# Installation Instructions *Rev.01*

## AIR SPRING 3"-6" LIFT SPACER KIT

### 89-52220-3 TOYOTA TUNDRA (2022+)

#### WARNING! – READ BEFORE USE

READ INSTRUCTIONS THOROUGHLY AND COMPLETELY BEFORE INSTALLATION.

INSTALLATION BY A CERTIFIED PROFESSIONAL MECHANIC IS HIGHLY RECOMMENDED.

LOGIQ™ IS NOT RESPONSIBLE FOR ANY DAMAGE OR FAILURE RESULTING FROM IMPROPER INSTALLATION.



**BEFORE LIFTING TRUCK  
AIR SPRINGS MUST BE INFLATED**



**150 PSI MAX AIR SPRING PRESSURE**



**NEVER EXCEED MANUFACTURER'S  
MAXIMUM PAYLOAD OR GVWR**



**CALIFORNIA RESIDENTS - PROP 65**

WARNING: This product can expose you to chemicals including Di(2-ethylhexyl) phthalate (DEHP), which is known to the State of California to cause cancer, and birth defects or other reproductive harm. For more information go to: [www.P65Warnings.ca.gov/product](http://www.P65Warnings.ca.gov/product).

#### WARRANTY

LOGIQ™ provides a limited lifetime warranty to the original purchaser of products, that the product be free from defects in workmanship and materials when used on cars and trucks as specified by LOGIQ™ and under normal operating conditions. This warranty is subject to the requirements and exclusions set forth in the full Limited Warranty and Return Policy that is available at [logiqair.com/warranty](http://logiqair.com/warranty). Air compressors are a wearing component and are covered by a 2-year warranty from the date of purchase. The warranty does not provide coverage for abuse, operation in a manner not consistent with the product's design, or damage resulting from exposure to the elements.



#### WARNING & DISCLAIMERS

By installing this product you acknowledge that the suspension of this vehicle has been modified. As a result, this vehicle may handle differently than that of factory-equipped vehicles. As with any vehicle, extreme care must be used to prevent loss of control or roll-over during sharp turns or abrupt maneuvers. Always wear seat belts, and drive safely, recognizing that reduced speeds and specialized driving techniques may be required. Failure to drive this vehicle safely may result in serious injury or death. Do not drive this vehicle unless you are familiar with its unique handling characteristics and are confident of your ability to maintain control under all driving conditions. Some modifications (and combinations of modifications) are not recommended and may not be permitted in your state. Consult your owner's manual, the instructions accompanying this product, and state laws before undertaking these modifications. You are responsible for the legality and safety of the vehicle you modify using these components.



**Installation Instructions**  
**AIR SPRING 3"-6" LIFT**  
**SPACER KIT**

89-52220-3 TOYOTA TUNDRA (2022+)

TOOLS REQUIRED
JACK & JACK STANDS
SAFETY GLASSES
TORQUE WRENCH
SOCKET DRIVER
AIR LINE CUTTER (OR RAZOR BLADE)
9/16" SOCKET
9/16" WRENCH
9/16" CROWSFOOT
22MM WRENCH
22MM CROWSFOOT

QTY	PARTS INCLUDED
2	AIR SPRING LIFT SPACERS
1	HARDWARE KIT
HARDWARE KIT CONTENTS	
2	3/8"-16 THIN PROFILE NYLON LOCKING NUT
2	3/8" FLAT WASHER
2	M14 - 2.0 X 35MM HEX HEAD BOLT
2	M14 FLAT WASHER

APPLICATION NOTES
<b>TRUCK COMPATIBILITY</b>
ONLY COMPATIBLE WITH 3-6" LIFT KITS THAT INCLUDE BUMPTOP SPACERS
IF LIFT KIT CAME WITH REAR SPACERS, REMOVE THEM BEFORE INSTALLING THE LOGIQ SPACERS
<b>5<sup>TH</sup> WHEEL COMPATIBILITY</b>
ALL HITCHES ARE COMPATIBLE

## STEP 1 PREPARE TRUCK

Note original ride height measurement from center of rear fender arch to ground.


If vehicle is equipped with factory inner fender liners, remove them and set aside before starting installation.

### BEFORE LIFTING TRUCK, ENSURE AT LEAST 20 PSI IN AIR SPRINGS.

Safely lift truck and support with jack stands under the frame.

Remove rear wheels.


## STEP 2 DETACH AIR SPRING TOP CAP

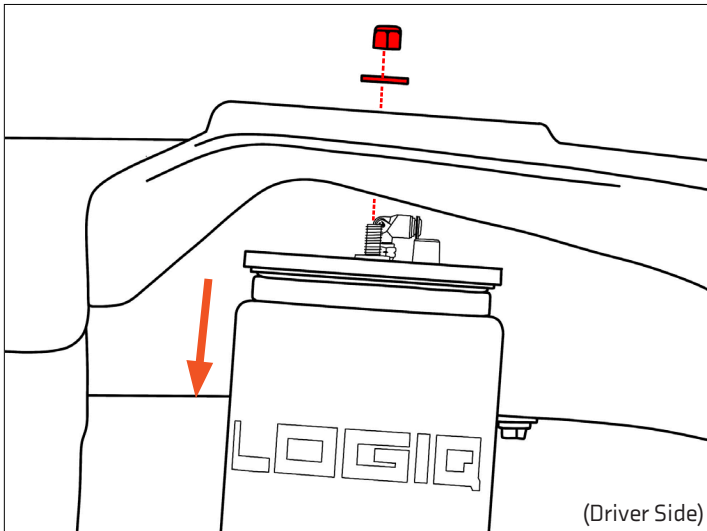

Remove the air line from the air fitting.


Remove the 3/8" nut and washer holding the air spring top cap to the truck perch using either a 9/16" socket or wrench.

Compress the spring or droop the suspension to create enough room between the truck perch and air spring top cap to install the lift spacer.

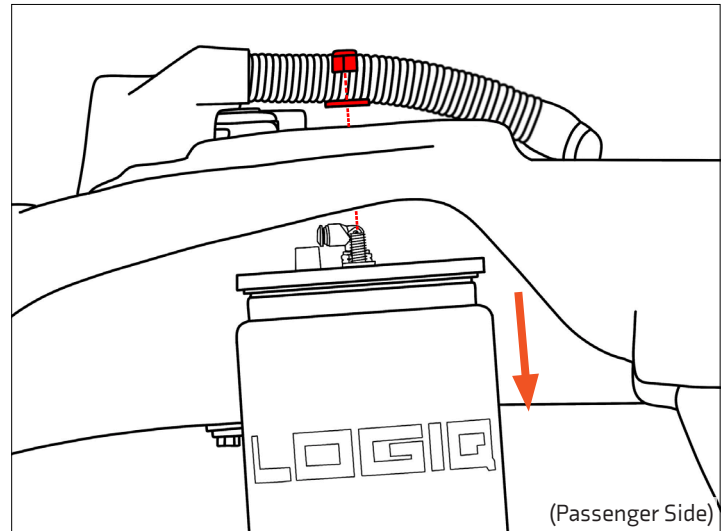

Repeat for the passenger side.



## STEP 3 INSTALL LIFT SPACER ONTO AIR SPRING

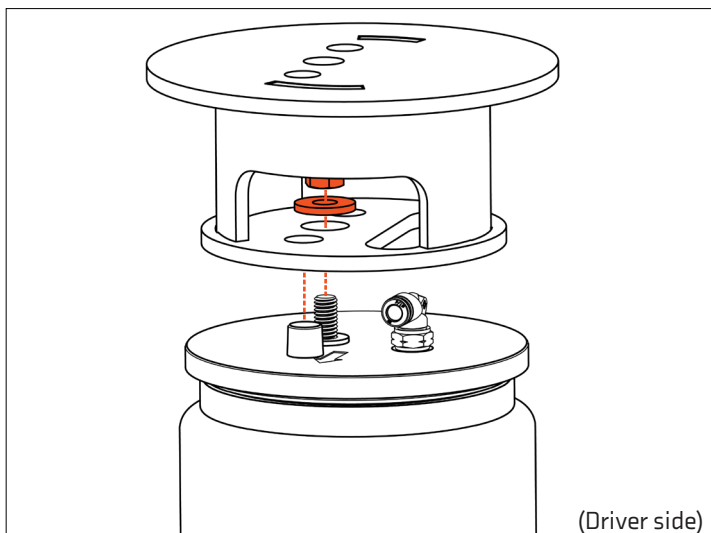


The lift spacer must be installed onto the air spring before installing it on the truck.

Place the lift spacer on top of the air spring. The stud should go through the center hole and the air fitting should be lined up with the slot as shown. The locating dowel should line up with one of the other 2 holes as shown.


Attach the spacer to the air spring using the supplied 3/8" flat washer, thin profile nut and a 9/16" wrench.

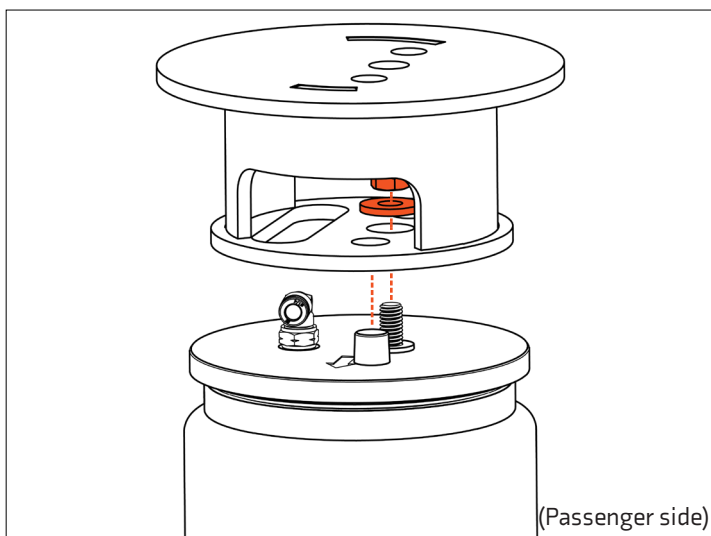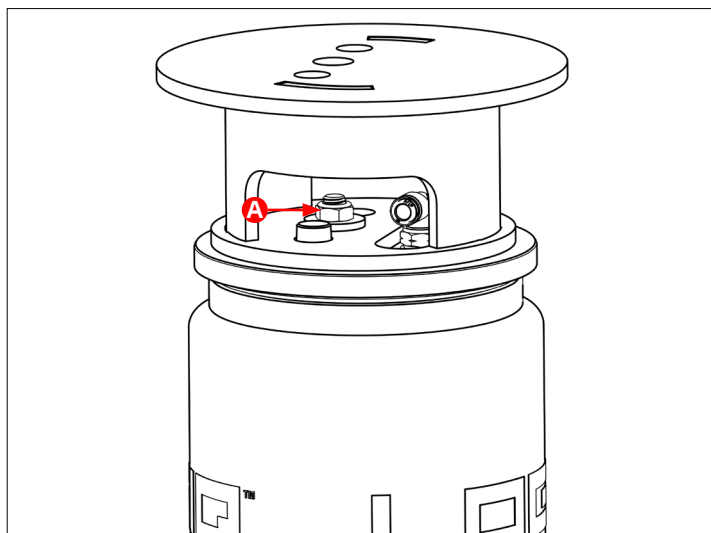

Repeat for the passenger side.

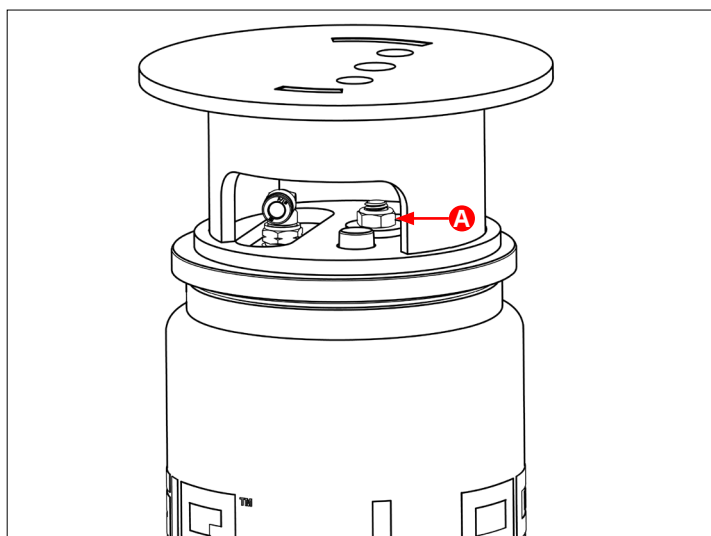


## STEP 4 INSTALL LIFT SPACER ONTO TRUCK

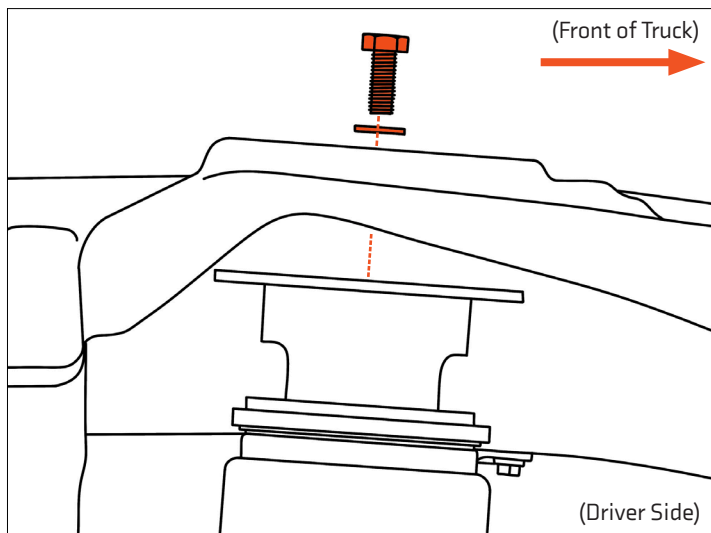

Attach the lift spacer to the truck perch using the supplied M14 flat washer, hex head bolt and a 22MM wrench.

The bolt should be installed through the center hole of the perch and into the center hole of the lift spacer that has the weld nut.

Get the bolt snug, but do not tighten yet.

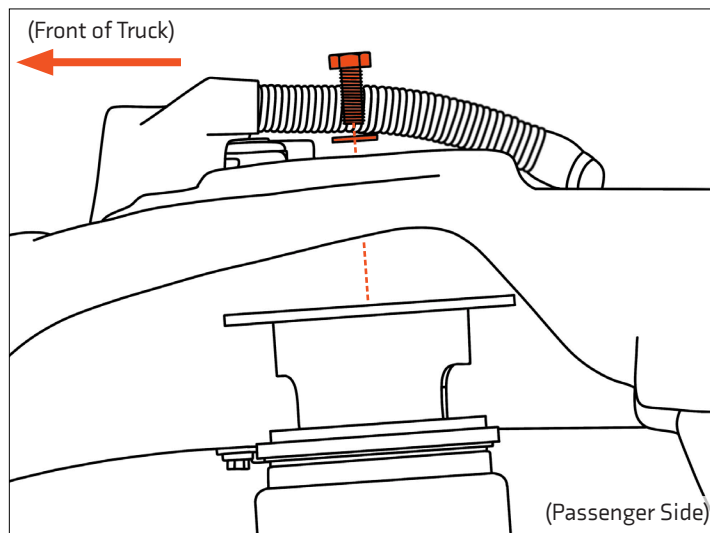

Repeat for the passenger side.


## STEP 5 AIR LINE ROUTING

When used with an on-board air management system, refer to the on-board air management system installation instructions before routing the air lines.



When not using an on-board air management system, mount inflation valves at desired location using 5/16" drill bit.

In either case, route air line through the holes in the spring perch and spacer as shown. Insert air line into the air fitting of each air spring assembly. **Avoid hot exhaust and sharp edges. Cut air line square and free from burrs with air line cutter or razor blade!**

**ONCE AIRLINES ARE INSTALLED, INFLATE EACH AIR SPRING TO 20 PSI BEFORE FINAL TORQUING.**

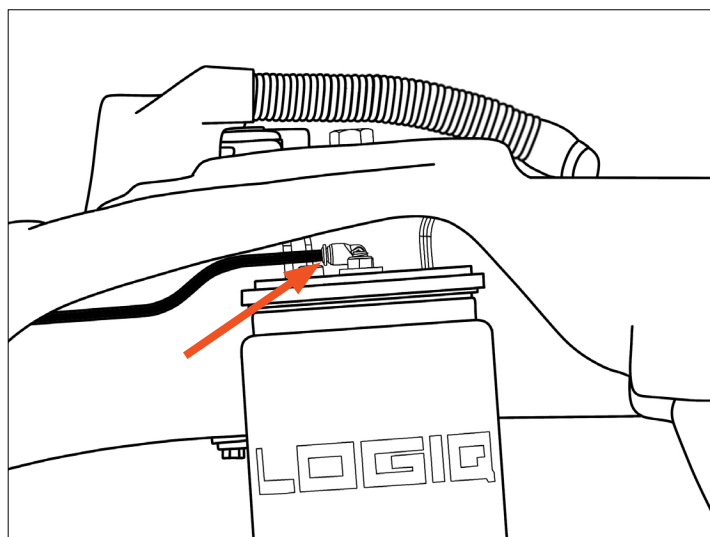

## STEP 6 TORQUE HARDWARE

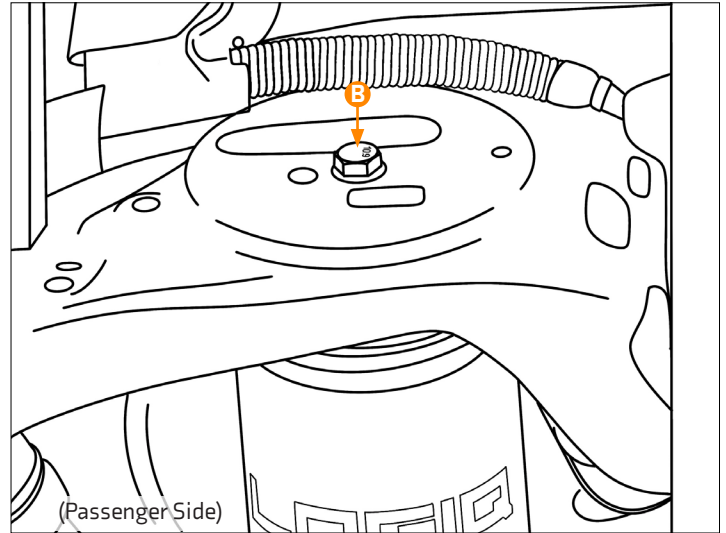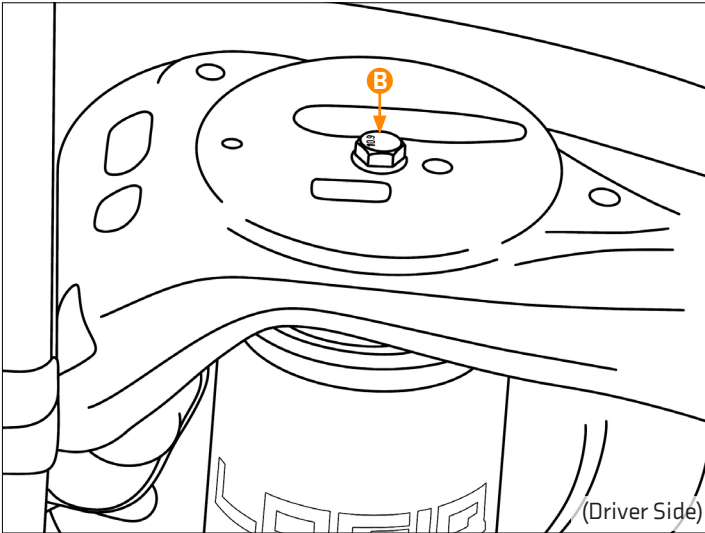

**NOTE: ENSURE THE LIFT SPACER IS SITTING FLAT AND CENTERED IN THE SPRING PERCH BEFORE TORQUING.**

**B** Torque the M14 bolts to **80 FT. LB.** using a 22MM crowsfoot.

## STEP 7 FINAL SAFETY CHECKS

Check for leaks at fittings with soapy water.

Verify all fasteners are torqued properly.

Use a tape measure and inflate the air springs until the ride height matches the original ride height measurement from center of rear fender arch to ground.

Verify at least 20 PSI in air springs before driving.

## **WARNING & DISCLAIMERS CONTINUED**

### **Safety Warnings**

#### **MISUSE OF THIS PRODUCT COULD LEAD TO INJURY OR DEATH.**

Suspension systems or components that enhance the on and off-road performance of your vehicle may cause it to handle differently than it did from the factory. Extreme care must be used to prevent loss of control during abrupt maneuvers.

Always operate your vehicle at reduced speeds to ensure your ability to control your vehicle under all driving conditions. Failure to drive safely may result in serious injury or death.

Driver and passengers must **ALWAYS** wear seat belts, avoid quick sharp turns and other sudden maneuvers. LOGIQ™ does not recommend the combined use of suspension lifts, body lifts, or other lifting devices.

You should never operate your vehicle under the influence of alcohol or drugs.

Constant maintenance is required to keep your vehicle safe. Thoroughly inspect your vehicle before and after every off-road use.

It is the responsibility of the retailer and/or the installer to review all state and local laws, with the end user of this product, related to bumper height laws and the lifting of their vehicle before the purchase and installation of any LOGIQ™ products.

Raised vehicles have altered viewing angles than stock vehicles. This can lead to larger or different blind spots than the driver is accustomed. It is the responsibility of the driver to be aware of this and check their surroundings at all times while the vehicle is in motion and immediately prior to operating vehicle. Failure to do so can lead to damages, injury, or death.

### **Installation Warning**

All steps and procedures described in these instructions were performed while the vehicle was properly supported on a two post vehicle lift with safety jacks.

Use caution during all disassembly and assembly steps to ensure suspension components are not over extended causing damage to any vehicle components and parts included in this kit.

Included instructions are guidelines only for recommended procedures and are not meant to be definitive. Installer is responsible to insure a safe and controllable vehicle after performing modifications.

LOGIQ™ recommends the use of an OE Service Manual for model/year of vehicle when disassembly and assembly of factory and related components.

Unless otherwise specified, tighten all bolts and fasteners to standard torque specifications listed within the OE Service Manual.

Suspension components that use rubber or urethane bushings should be tightened with the vehicle at normal ride height. This will prevent premature wear or failure of the bushing and maintain ride comfort.

Larger tire and wheel combinations may increase leverage on suspension, steering, and related components.

Due to payload options and initial ride height variances, the amount of lift/lower is a base figure. Final ride height dimensions may vary in accordance to original vehicle ride height. Always measure the vehicle ride height prior to beginning installation.



## WARNING & DISCLAIMERS

### SAEJ2492 Warning

By installing this product, you acknowledge that the suspension of this vehicle has been modified. As a result, this vehicle may handle differently than that of factory-equipped vehicles. As with any vehicle, extreme care must be used to prevent loss of control or roll-over during sharp turns or abrupt maneuvers. Always wear seat belts, and drive safely, recognizing that reduced speeds and specialized driving techniques may be required. Failure to drive this vehicle safely may result in serious injury or death. Do not drive this vehicle unless you are familiar with its unique handling characteristics and are confident of your ability to maintain control under all driving conditions. Some modifications (and combinations of modifications) are not recommended and may not be permitted in your state. Consult your owner's manual, the instructions accompanying this product, and state laws before undertaking these modifications. You are responsible for the legality and safety of the vehicle you modify using these components.

### Headlamp Warning

A lifted or lowered vehicle may have different headlight aim performance. LOGIQ™ recommends marking and recording the headlight beam position before kit installation and then adjusting, if necessary, the headlamps to the same height settings after kit installation. Set the vehicle on a level surface 10' to 15' from a solid wall or garage door. (This is a general distance with some manufacturers requiring different distances.) Note the top height of the low beam's bright spot, the top of the most intense part of the beam, for driver and passenger side. Height may vary from side to side. Repeat this procedure and adjust after lift kit is installed. Adjust if the aim is off by turning the adjusters gradually (a quarter of a turn) and looking to see where the new alignment falls. It may be easier to block one headlamp while adjusting the other. Consult the owner operation manual for procedures to adjust headlights - many automakers offer headlight aiming specs. Some states have their own specifications when it comes to headlight aim, so it's best to follow those rules when aligning headlights.

**FAILURE TO PERFORM THE POST INSPECTION CHECKS MAY RESULT IN VEHICLE COMPONENT DAMAGE AND/OR PERSONAL INJURY OR DEATH TO THE DRIVER AND/OR OTHERS.**

### Final Checks & Adjustments

Once the vehicle is lowered to the ground, check all parts which have rubber or urethane components to ensure proper torque. Torque lug nuts to the wheel manufacturer specs. Move vehicle backwards and forwards a short distance to allow suspension components to adjust. Turn the front wheels completely left then right and verify adequate tire, wheel, brake line, and ABS wire clearance. Test and inspect steering, brake and suspension components for tightness and proper operation. Inspect brake hoses and ABS lines for adequate slack at full extension, adjust as necessary.

**RECHECK ALL HARDWARE FOR PROPER TORQUE VALUES AFTER 500 MILES, AND THEN PERIODICALLY AT EACH SERVICE INTERVAL THEREAFTER.**

### Vehicle Handling Warning

Increasing the height of your vehicle raises the center of gravity and can affect stability and control. Use caution on turns and when making steering corrections.

Vehicles with larger tires and wheels will handle differently than stock vehicles. Take time to familiarize yourself with the handling of your vehicle.

### Wheel Alignment/Headlamp Adjustment

It is necessary to have a proper and professional wheel alignment performed by a certified alignment technician. Align the vehicle to factory specifications. It is recommended that your vehicle alignment be checked after any off-road driving.

In addition to your vehicle alignment, for your safety and others, it is necessary to check and adjust your vehicle headlamps for proper aim and alignment. If the vehicle is equipped with active or passive safety/collision monitoring and/or avoidance systems including, but not limited to, camera- or radar-based systems, check and adjust your vehicle's systems for proper aim and function.